



Lab 1 (InLab): Introduction to Digilent Adept

1. Open **Digilent-Adept** when you have your FPGA connected to the PC.
2. At top right, select Connect: Basys2. If you cannot select it, it means the computer cannot see FPGA, check that the FPGA switch on the left is opened and that the USB is attached to the PC.
3. Click **Browse...** button on FPGA line as shown below.

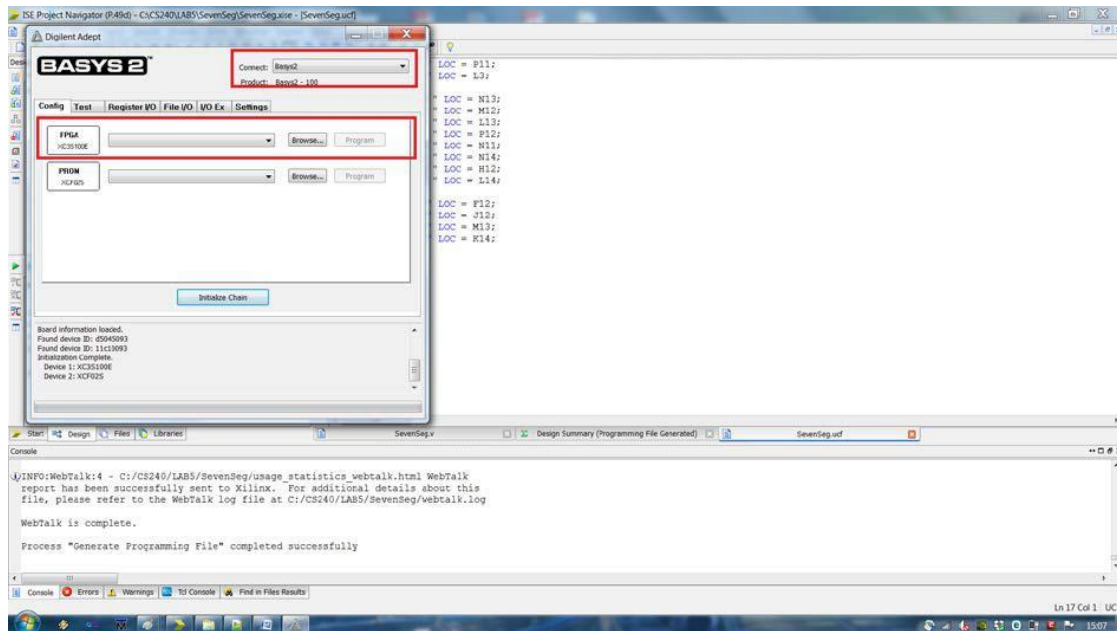

4. Select the '.bit' file from your Project directory from the FPGA line as shown on the picture above.

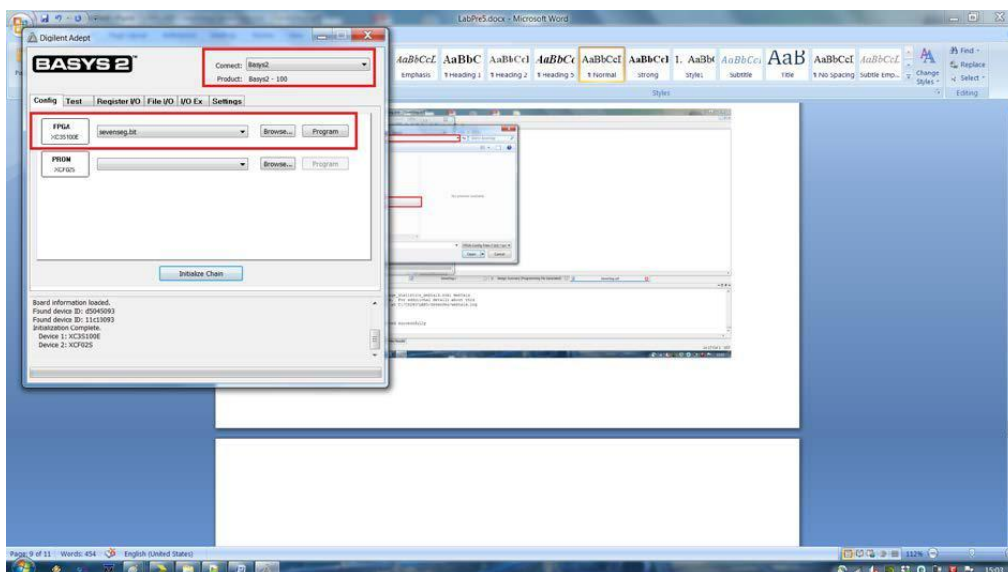

5. Click the **Program** button and if everything worked out, you will see "Programming Successful."